



**Industrial Port-Powered RS232 ⇔ RS485 Converter**  
**(Part Number: CVT-485-1)**

CE

**CommFront**<sup>®</sup>  
Communications made easy

***<http://www.CommFront.com>***

**Part Number: CVT-485-1****■ INTRODUCTION**

The CVT-485-1 is a compact, rugged, industrial-grade, port-powered RS-232 to RS-485 converter, which can be used to convert any standard RS-232C port into a two-wire RS-485 port and vice versa. The unit is efficiently powered from the RS-232 data line; it also supports data direction auto-turnaround. Therefore, no external power, software drivers or flow control is required.

**■ FEATURES**

- Port-powered, no external power is required.
- Supports 128 nodes of RS-485 devices.
- Operates reliably from 300 to 115,200 baud.
- Industrial grade enclosed in a rugged, rustless ABS housing.
- Plug and play (hot-pluggable, data format auto-sensing and self-adjusting).
- Data direction auto-turnaround, no software drivers or flow control is required.
- Operating temperature: -40°F to 185°F (-40°C to 85°C).
- Built-in 600W surge protection, 15kV static protection and circuit protection.
- ALL-IN-ONE rugged terminal block with optional 120Ω terminator and 5VDC input.
- Surface Mount Technology manufactured to RoHS and ISO-9001 standards.
- Safety: Strictly certified by TUV (Cert No. SG-CE-090012).
- 5-year manufacturer's warranty.


**■ SPECIFICATIONS**

Compatibility:	EIA/TIA RS-232C standard and RS-485 standard
Power Source:	Port power from RS-232 data line
Current Consumption:	Less than 10mA
Baud Rates:	300 to 115,200bps (auto-sensing and self-adjusting)
Distance:	RS-232 side: 16ft (5m); RS-485 side: Depending on power from RS-232 port, will transmit up to 4000ft (1.2km) at 19,200bps
Connector:	RS-232 side: DB-9 Female; RS-485 side: DB-9 Male; Termination Board: DB-9 Female and a 4-Way Terminal Block
Maximum number of drops:	128
End-of-Line Terminator:	120Ω (built-in, selectable)
Surge Protection:	600W
Static Protection (ESD):	Up to 15KV
Dimensions (H x W x D):	0.63 x 1.3 x 3.4 in (16 x 32 x 86 mm) (with termination board)
Weight:	1.27 oz (36 g) (with termination board)
Operating Temperature:	-40°F to 185°F (-40°C to 85°C)
Operating Humidity:	Up to 90% RH (no condensation)

**■ PIN ASSIGNMENT**

RS-232 Side (DB-9 Female Connector):

Pin:	1	4	6	7	8	2	3	5
Signal:	DCD	DSR	DTR	CTS	RTS	TX	RX	GND
Function:	tied together			tied together		TX	RX	GND

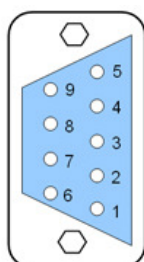


DB-9 FEMALE

Note: Some software requires handshake line acknowledgements. To satisfy the requirements, the CVT-485-1's handshake lines (RS232 side) are tied together (DCD, DSR, and DTR tied together, CTS and RTS tied together). Therefore, you don't have to modify your existing software.

RS-485 Side (DB-9 Male Connector / Terminal Block):

DB-9 Pin:	1	3	5	9	6,7
Terminal Block:	A+	B-	GND	+5V	Jumper (120)
Function:	RS485+	RS485-	GND	Optional +5V DC input	Terminate/remove Jumper 120 to turn ON/OFF the 120Ω end-of-line terminator

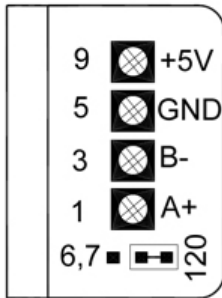

- The numbers on the left indicate the pin assignment of DB-9 male connector (RS-485 side).
- The unit will function correctly only when the voltage on +5V pin is around +5VDC (when RS232 port is connected). Otherwise, please check the connection. External 5VDC regulated power supply is accepted.
- The unit comes with a built-in selectable 120Ω end-of-line terminator; connect it when the data rate is over 19.2kbps or the RS-485's distance exceeds 660ft (200m).

■ CONNECTIONS

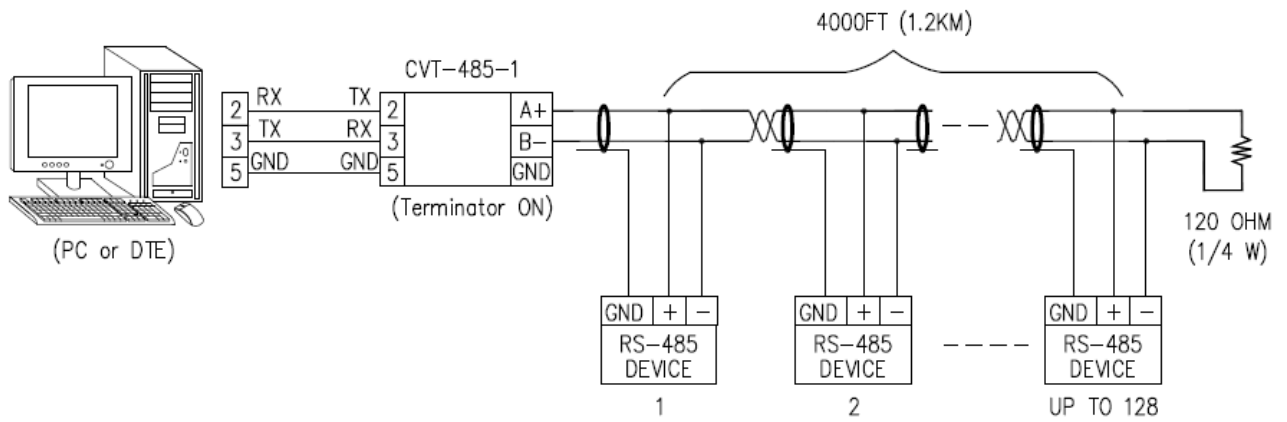


FIGURE 1: MASTER-SLAVE MULTI-DROP CONNECTIONS


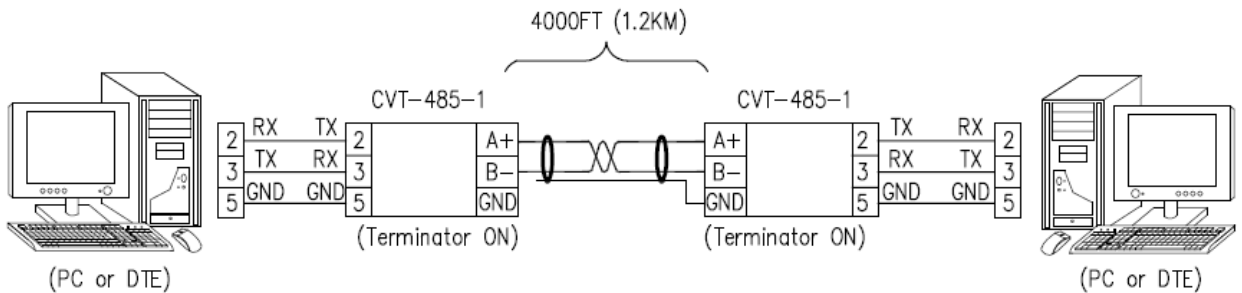


FIGURE 2: EXTENDING HALF-DUPLEX RS-232 DISTANCE (DATA ONLY)

■ 120-OHM END-OF-LINE TERMINATION

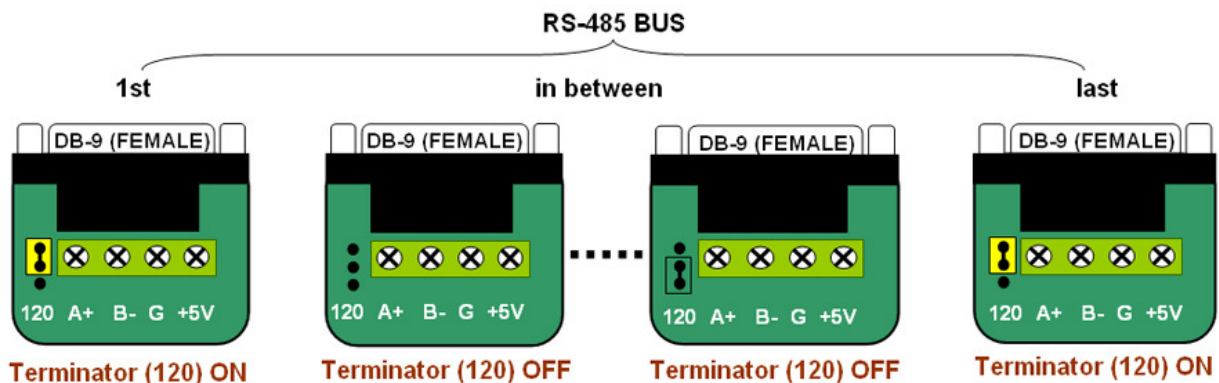


Turn on the 120Ω end-of-line terminator on both ends of the RS-485 bus when the data rate is over 19.2kbps or the RS-485's distance exceeds 660ft (200m).

## ■ INSTALLATION NOTES

- Connect PC's (or other DTE device's) COM port (or use a straight-through cable) to the RS-232 side of CVT-485-1, use a crossover (Null-Modem) cable for DCE device.
- 120-Ohm terminator: If you are using the converter with the provided terminal block, terminate the Jumper "120" to turn ON the terminator and remove it to turn the terminator OFF. If you are using the converter without the provided terminal block, short pin 6 & 7 on the DB-9 connector (RS-485 side) to turn ON the terminator.
- The 120 $\Omega$  end-of-line terminator adds heavy DC loading to a system; connect it only when the data rate is over 19.2kbps or the RS-485's distance exceeds 660ft (200m).
- The unit comes with an optional 5VDC input; connect a regulated 5VDC power supply to the +5V input if the port power is insufficient.

## ■ TROUBLESHOOTING

- Measure pin +5V and GND with a voltmeter, and be sure that it is around +5VDC (when RS232 port is connected). Some COM ports, such as USB-RS232 ports, come with an insufficient port power that is less than +/-5VDC; connect a regulated 5VDC power supply to the +5V input in such a case.

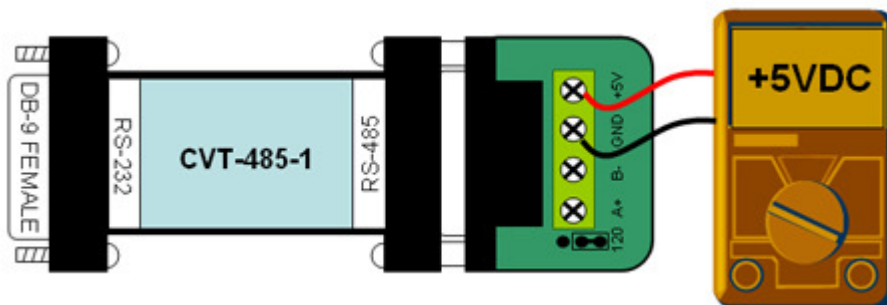

- Perform a loopback test by using CommFront's 232Analyzer software: Connect two numbers of CVT-485-1 to your PC's COM ports and run two instances of the 232Analyzer software, then send commands from one COM port, you should receive an echo of the commands sent on the other COM port. By performing a simple loopback test like this, you can test both the transmitter and receiver of the converter. This is very helpful when you are in doubt about the performance of your converter.

